

SPARE PARTS LIST

PAGE 1

MODEL NO. BVR450

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	*****	*****	***	*****
002	266045-0	Önmetszo csavar M4x20	9	
003	188121-9	Housing set INC. 29	1	
004	643812-4	Akku csatlakozó	1	
005	650580-2	SWITCH SGE120C-4	1	
006	231298-0	Nyomórugó 6 HM1500	1	
007	419511-8	SWITCH LEVER	1	
008	421961-5	WATERPROOF COVER	1	
009	322935-8	Sapka VR250DWA	1	
010	961002-0	Seeger-gyuru S-6 961002-0	1	
011	210018-5	Golyóscsapagy 626 VR250DWA	1	
012	210018-5	Golyóscsapagy 626 VR250DWA	1	
013	331503-6	Cso 25 VR250DWA	1	
014	322934-0	Vibrátor VR250DWA	1	
015	211016-2	Golyóscsapagy 626LLB 211016-2	1	
016	211016-2	Golyóscsapagy 626LLB 211016-2	1	
017	421578-4	Gumi gyuru VR250DWA	1	
018	443101-5	Filc gyuru VE250DWA	1	
019	322969-1	Kapcsolóelem VR250DWA	1	
020	163420-0	Hajlékon tengely BVR	1	
021	416244-6	Különleges anya 36 VR250DWA	1	
022	163419-5	Flexible Hose	1	
023	266045-0	Önmetszo csavar M4x20	4	
024	316893-8	Csapágház VR250DWA	1	
025	211056-0	#Golyóscsapagy 629LLB 211056-0	1	
026	911118-1	Trapézfeju csavar M4x12 911118	2	
027	318038-4	SUPPORTER	1	
028	629836-4	DC MOTOR	1	
029	188121-9	Housing set INC. 3	1	
030	158051-8	Cover complete	1	
031	192954-6	FLEXIBLE ASS'Y INC. 9-20,22	1	
A01	***DC18SC	DC18SC CHARGER	1	
A02	194204-5	BATTERY BL1830 SET	2	
A03	824768-2	PLASTIC CARRYING CASE	1	
A04	450128-8	BATTERY COVER	1	

SERVICE DRAWING

MODEL NO. BVR450

