

SPARE PARTS LIST

PAGE 1

MODEL NO. HT48

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	6011203A03	POWER SUPPLY DORD/EU PLUG	1	
002	6199202A01	POWER CORD PROTECTOR	1	
003	6SDABB0414	SCREW	2	
004	6043-84001	STRAIN RELIEF	1	
005	6041BH0101	TERMINAL BLOCK	1	
006	9010MA0203	CAPACITOR	1	
008	9010MA0201	INNER WIRE	1	
009	9022MA0201	SWITCH	1	
010	211027-7	Ball Bearing 627ZZ	1	
011	9228MA0212	Housing Set	1	
012	9261MA0201	FIELD	1	
013	191962-4	Szénkefe CB-419 (CB-406, CB-40	1	
014	643923-5	Szénkefetartó 643923-5	2	
015	9260MA0201	Armature	1	
016	9056MA0201	SWITCH LEVER A	1	
017	9056MA0203	SWITCH LEVER C	1	
018	9114MA0202	Switch arm A	1	
019	9114MA0201	ROD	1	
020	9114MA0203	SWITCH ARM B	1	
021	9110MA0201	Spindle	1	
022	9124MA0202	SPINDLE SLEEVE	2	
023	9228MA0209	Vágókés készlet UH4860	1	
024	253777-8	Lapos Alátét 8 HP2040/HP2041*	1	
025	6148BH0101	BUSH	1	
026	9073MA0201	GEAR	1	
027	9228MA0207	BEARING BOX	1	
028	9252MA0201	SPONGE	1	
029	211062-5	Golyóscsapágy 6000ZZ	1	
030	9210MA0201	PIN 4	1	
031	9056MA0204	SWITCH LEVER COMPLETE	1	
032	9024MA0201	COMPRESSION SPRING	1	
033	9068MA0201	FRONT HANDLE	1	
034	9SDABM0526	Screw	2	
035	9017MA0201	PROTECTING BOARD	1	
036	6SDABB0418	SCREW	2	
037	6SDABB0418	SCREW	14	
038	9210MA0201	PIN 4	1	
039	253777-8	Lapos Alátét 8 HP2040/HP2041*	1	
040	9024MA0201	COMPRESSION SPRING	1	
041	9228MA0212	Housing Set	1	
A01	9101MA0202	BLADE COVER	1	
A02	158024-1	* Kábeltartó horog sövénynyíró o	1	
A03	154511-8	CORD HOLDER CPL.	1	

SERVICE DRAWING

MODEL NO. HT48

